

CONTROLLER



SYSTEM POWER ON	WHEN POWERED UP ALL 3 BUTTONS WILL ILLUMINATE AND THE TABS WILL PERFORM AN AUTO RETRACT BRIEFLY TO ENSURE THEY ARE STARTING FROM THE STOWED POSITION
LEFT BUTTON	DEPLOYS STARBOARD SIDE TAB CREATING A SURF WAVE ON THE LEFT SIDE OF THE BOAT
RIGHT BUTTON	DEPLOYS PORT SIDE TAB CREATING A SURF WAVE ON THE RIGHT SIDE OF THE BOAT
OFF BUTTON	PRESSING THE OFF BUTTON AT ANY TIME WILL DISABLE THE SYSTEM AND STOW THE TABS
POTENTIOMETER DIAL	USED TO TUNE IN THE SHAPE AND PITCH OF THE WAVE ADJUSTING FROM EITHER A SKIM STYLE WAVE TO A SURF STYLE WAVE

INFORMATION



LAUNCH MODE	THIS MODE IS USED TO SIGNIFICANTLY IMPROVE THE HOLE SHOT AND TIME TO PLANE OUT WHEN FULLY BALLASTED. HOLD BOTH LEFT AND RIGHT BUTTONS SIMULTANEOUSLY FOR 3 SECONDS. BOTH BUTTONS WILL FLASH RAPIDLY AND THEN REMAIN LIT TO INDICATE LAUNCH MODE IS ACTIVATED
TRAVELING ABOVE 17MPH	THE SYSTEM STOWS THE TABS REGARDLESS OF THE MODE SET TO PROTECT THE SYSTEM AND YOUR BOAT
SYSTEM KEY	ACTION
LIGHT BLINKING	AN OPERATION IS BEING PERFORMED
LIGHT ON-STEADY	THE MODE IS ACTIVE (EX.SURF LEFT LIT-ACTIVATED)
GSA CONTROLLER IPHONE APP/APPLE WATCH APP	ACTION
DOWNLOAD GSA CONTROLLER FROM APP STORE	POWER SYSTEM ON BOAT UP FIRST, THEN CONNECT TO BOAT WITH APP USING TOP LEFT SEARCH OPTION WHEN APP IS OPERATING

& SYSTEM INFO



GPS SIGNAL REQUIRED	YOUR SYSTEM WILL INCLUDE A GPS SIGNAL PUCK. IT IS REQUIRED IN ORDER FOR THE SYSTEM TO FUNCTION. THE OFF BUTTON WILL FLASH RAPIDLY INDICATING THAT THE SYSTEM IS SEEKING A GPS LOCATION. IF YOUR BOAT IS STORED IN OR UNDER A METAL BUILDING, YOU MUST PULL THE BOAT OUT TO VERIFY SYSTEM IS PROPERLY INSTALLED AND FUNCTIONING. ONCE GPS LOCATION IS ACQUIRED, THE OFF BUTTON WILL STAY LIT LETTING YOU KNOW THAT THE SYSTEM IS READY TO USE. IF AT ANYTIME THE GPS CONNECTION IS LOST, THE OFF BUTTON WILL BLINK RAPIDLY ALERTING YOU TO THE SITUATION
---------------------	---